
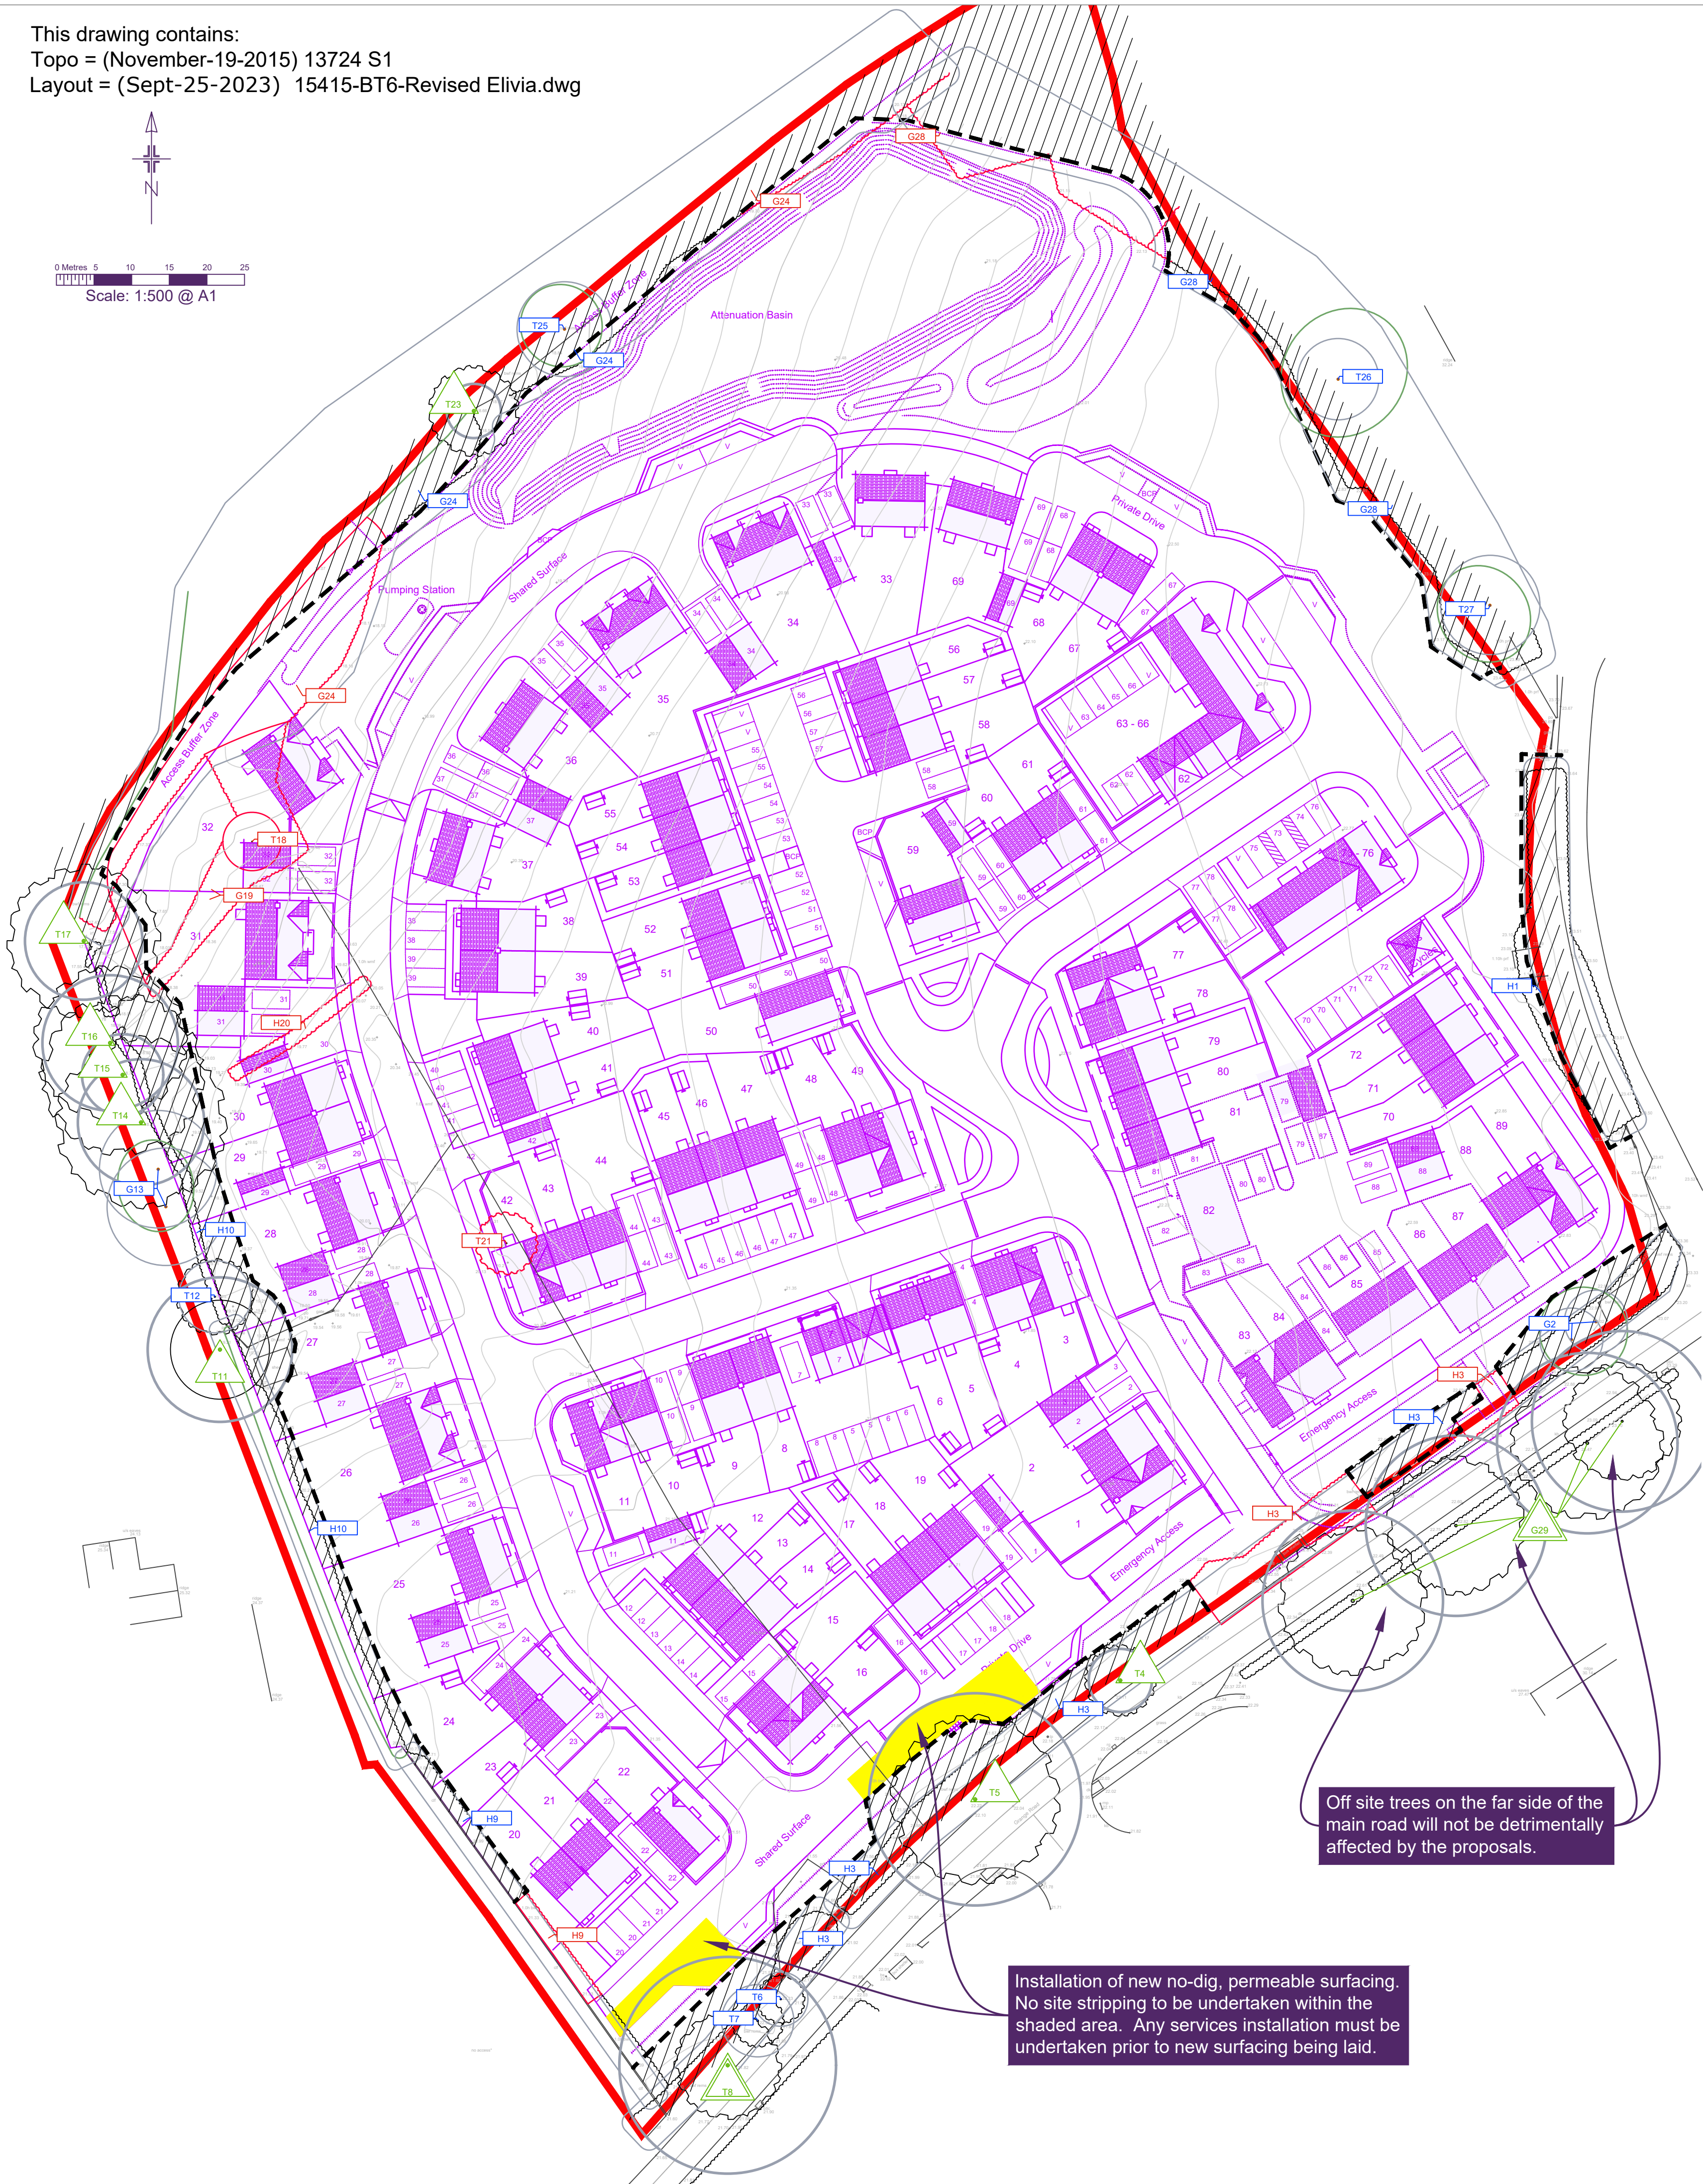


Tree schedule				
Tree No	Species	Category	RPA Radius	Tree Works
H1	Elm, holly, oak	C	3.0	-
G2	Oak	C	4.2	-
H3	Hawthorn	C	3.0	Fell part for installation of pedestrian, and main access
T4	Oak	B	4.2	-
T5	Oak	B	14.1	Consider remedial works to reduce crown
T6	Oak	C	3.6	-
T7	Ash	C	4.8	-
T8	Oak	A	14.4	Consider remedial works to reduce crown
H9	Hawthorn	C	1.8	Fell part for development
H10	Holly	C	2.4	-
T11	Western red cedar	B	9.6	-
T12	Plum	C	4.8	-
G13	Lawson cypress	C	7.8	-
T14	Norway maple	B	8.4	-
T15	Beech	B	5.4	-
T16	Beech	B	9.0	-
T17	Lime	B	7.8	-
T18	Spruce	C	2.4	Fell for development
G19	Shrubs and scrub	C	1.8	Fell for development
H20	Leyland cypress	C	1.8	Fell for development
T21	Birch	C	2.4	Fell for development
T23	Oak	B	3.6	-
G24	Scrub	C	3.6	Fell part for access, and cut back as necessary
T25	Goat willow	C	6.3	-
T26	False acacia	C	5.4	-
T27	Walnut	C	6.6	-
G28	Holly, laurel, field maple	C	3.6	Fell part for access, and cut back as necessary
G29	Oak	A	12.0	-

This drawing contains:
Topo = (November-19-2015) 13724 S1
Layout = (Sept-25-2023) 15415-BT6-Revised Elivia.dwg

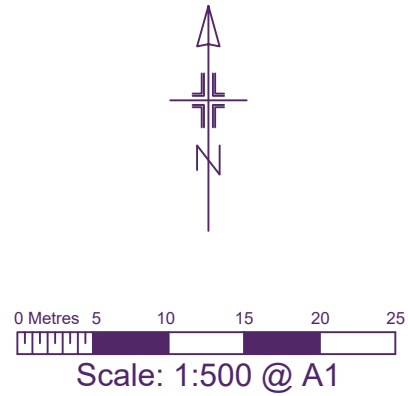

BS category A

Trees of high quality

BS category B

Trees of moderate quality

BS category C

Trees of low quality

Trees to be removed

Estimated tree positions not included on original land survey and/or adjusted crown spreads

Construction exclusion zone (CEZ) to be protected by fencing and/or ground protection

Precautionary Area

Root protection area (RPA) boundaries for category A and B trees

Root protection area (RPA) boundaries for category C trees

Tree protection plan

Location of trees, categorisation & protection/management proposals for land adjacent to Netley Grange, Grange Road, Netley

Barrell Plan Ref: 23015-1

Provided Plan Refs: 13724 S1 & STRA180834 SL01 Rev H

Permission is granted to scale from this drawing for Local Authority Planning Approval purposes relating to tree protection measures only. Where applicable this drawing is to be read in conjunction with the arboricultural report. This drawing is the copyright of Barrell Tree Consultancy 2023. ©

This drawing to be reproduced in colour only.

www.barrelltreecare.co.uk

SGN 1 Monitoring tree protection

Always:

- ✓ have a pre-commencement meeting with the tree consultant before development starts
- ✓ use the tree consultant to regularly check that protection remains fit for purpose
- ✓ use the tree consultant to supervise work in RPAs
- ✓ keep a written record of supervision

SGN 2 Fencing protected trees

Always:

- ✓ install protection before development starts
- ✓ make sure protection is fit for purpose, i.e. it prevents damage to trees and soil
- ✓ keep protection in place until there is no risk to trees
- ✓ get written permission to move or remove any protection

SGN 4 Pollution control

Always:

- ✓ keep toxic products away from RPAs

SGN 7 Excavating in RPAs

Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ use hand tools to dig in RPAs
- ✓ protect exposed roots from sunlight and drying out

SGN 9 Installing/upgrading surfacing in RPAs

Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ minimise damage to roots and disturbance to soil in RPAs
- ✓ minimise excavation when installing or upgrading surfacing in RPAs

SGN 11 Installing services in RPAs

Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ select the least damaging option when installing services, so prioritise trenchless, over broken trench over continuous trench
- ✓ hand-dig trenches if trenchless is not feasible

SGN 12 Landscaping in RPAs

Always:

- ✓ use the tree consultant to supervise work in RPAs
- ✓ avoid raising ground levels within 1m of the trunks of retained trees

How to use plan

More detailed guidance on each Site Guidance Note (SGN) can be found in a printed hard copy compilation of all the SGNs, issued to the Site Manager at the pre-commencement site meeting (**Note:** This should be retained on site throughout the duration of works). Additionally, an electronic pdf compilation of all the SGNs, was submitted with this drawing to the local planning authority and the client. Alternatively, a pdf of each SGN can be downloaded by:

1. clicking the image links in the electronic pdf version of this plan;
2. holding a mobile phone QR (Quick Response) code reader over the QR code in the paper version of this plan; or,
3. visiting our website at <https://www.barrelltreecare.co.uk/resources/technical-guidance>