

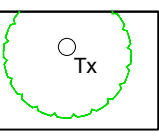


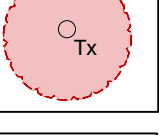
Widening of road to accommodate new pedestrian crossing point and suitable vehicle tracking requirements will require the removal of roadside trees and encroachment into the RPA of T158

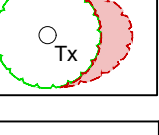
Excavation within the RPA to be carried out using a sensitive methodology and conducted under direct arboricultural supervision


Sectional removal from boundary group G28 to facilitate burying of overhead services


LEGEND


 TREE TO BE RETAINED

 TREE TO BE REMOVED

 TREE CANOPY TO BE REDUCED

 HEDGE/GROUP CANOPY TO BE RETAINED

 HEDGE/GROUP CANOPY TO BE REMOVED

 HEDGE/GROUP CANOPY TO BE REDUCED

 A CATEGORY TREE


 B CATEGORY TREE

 C CATEGORY TREE

 U CATEGORY TREE

 ROOT PROTECTION AREA (RPA) FOR RETAINED TREES

 TREE SHADING PROJECTION

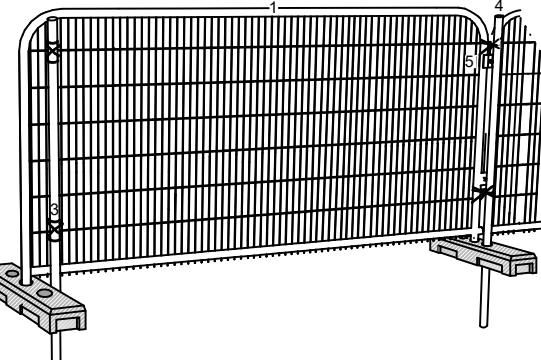
 AREA TREE PRESERVATION ORDER

 Tree Protection Fence

Extent of Area TPO ref. 606-E as per the online interactive mapping service provided by Eastleigh Borough Council

All Tree Protection Fence (TPF) shall be installed prior to any plant activity on site whatsoever, including demolition, utility installation, groundworks, and soil stripping. Once erected, the TPF will be regarded as sacrosanct, and will not be removed or altered without prior recommendation by the project arboriculturist and approval of the local planning authority.

Tree Protection Fence shall comprise of Heras type panels on 'boots', well braced by attachment to scaffold pole uprights driven firmly into the ground. Once the exclusion zone has been protected by barriers and/or ground protection, construction work can commence. All weather notices may be erected on the barriers.

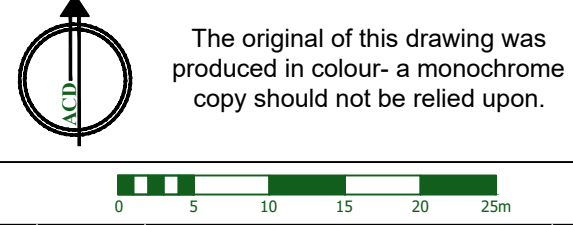


- 1 Weldmesh (e.g Heras) Panels
- 2 Concrete or rubber blocks
- 3 Scaffold pole uprights driven firmly into ground, then secured to panels with wire ties, or,
- 4 Uprights driven firmly into ground through hole in block, then secured to panels with wire ties.
- 5 Panels to be interlinked using clamps

SENSITIVE EXCAVATION (PINK)

The required excavation is within retained RPA. To reduce impacts to any potential underlying roots, the excavation is to be conducted in a sensitive manner either through use of hand-tools and air-spade where feasible or through use of an excavator with a toothless bucket attachment. All excavation within retained RPAs will require supervision by a suitably qualified arboriculturist. See corresponding Arboricultural Impact Assessment/Method Statement report for details.





**ACD**
ENVIRONMENTAL

HEAD OFFICE
Rodbourne Rail Business Centre, Grange Lane,
Malmesbury, SN16 0ES
Tel: 01666 825646

Unit 7, Godalming Business Centre, Woolsack Way
Godalming, GU7 1XW
Tel: 01483 425714

Suite 6, Crescent House, Yonge Close,
Eastleigh, SO50 9SX
Tel: 02382 026300

email: mail@acdenv.co.uk
www.acdenvironmental.co.uk

Copyright of ACD. All rights described in Chapter IV of the Copyright, Designs and Patents Act 1988 have been generally asserted. 2015. Copyright of this plan remains with ACD until all fees have been paid in full.

scheme: Kings Copse Avenue
Hedge End, Eastleigh

client: Eastleigh Borough
Council

drawing: Tree Protection Plan
date: 21/08/2025
scale: 1:500@A1
dwg no: EBC24408-03
(Sheet 1 of 3)
drawn: HEP checked: AJB